


ATEX INSTALLATION INSTRUCTIONS

**Valve island VS18 / VS26
with IO-Link interface**



 **IO-Link**

Change history:

The Change history reflects all changes of the Installation instruction, which were done after the initial release

Index	Capitel	Description of changes	Date	Name
A		New	03/09/2020	Mahler

Contact information

Norgren GmbH

Site Fellbach
Stuttgarter Straße 120
70736 Fellbach
Tel: +49 711 5209-0

Content

1 INTENDED USAGE	4
2 OPERATING MANUAL ATEX.....	5
2.1 General conditions.....	5
2.2 Installation	6
2.3 Operating.....	6
2.4 Failures.....	7
2.5 Maintenance and repair	7
3 ATEX CONFORMITY.....	8
3.1 Operating conditions.....	8
3.2 Labels	9
3.3 Specific conditions.....	9
3.4 Declaration of conformity.....	9

USE IN AREAS WITH POTENTIALLY EXPLOSIVE ATMOSPHERE (2014/34/EU „ATEX“) – OPERATING MANUAL AND DECLARATION OF CONFORMITY

The information in this booklet is valid for all ATEX valve islands of VS18 / VS26 series with IO-Link Interface overrides any conflicting information in other documents.

1 INTENDED USAGE

Please review all ATEX data and notes in this instruction booklet and other relevant documents to eliminate any risks which would jeopardize the safe function of the valve island. Any use beyond the permissible limits, or the failure to comply with the instructions of this booklet, will cause the user to be liable for damages. In case of non-permissible intrusions or modifications of the valve island, as well as failing to comply with the instructions of this booklet, the claim for guarantee expires and our liability is excluded. The valve island must be used only with non-combustible mediums which do not corrode, chemically or mechanically, the materials used. Use only mediums approved by Norgren.

2 OPERATING MANUAL ATEX

2.1 General conditions

- Please consider the information of this document as well as the use conditions and permissible data, which are on the product labels.
- VS18 / VS26 valve islands mentioned in this booklet must be used with permissible valves, plates and accessories from Norgren. In case of use with products of other manufacturers, Norgren assumes no liability. Moreover the EX approval as well as the claim of guarantee expires for items of equipment and accessories.
- The ATEX approval applies exclusive to the valve island with the original configuration shipped by Norgren.
- The valve island must be used with the original configuration only. If a modification of the configuration is needed, it must be taken by Norgren or by a body notified by Norgren only whereas the part number of the valve island will change.
- To achieve ATEX conformity, ATEX approved plugs as well as locking clips that prevent from accidental disconnection of plugs must be used, or the complete valve island has to be installed in a cabinet that meets the requirements of EN 60079-7 and / or 60079-31. See also section 3.3. Otherwise there is a risk of explosion due to sparking.
- Take measures to avoid unintentional or improper activation.
- Prior to the first electrical operation, ensure no danger would result from the medium exhausting from any open ports.
- Consider in case of pressurised systems that lines, valves and other components should not be removed.
- ATTENTION: There is some risk of injury! The surface of pilot valves could become very warm in continuous operation.
- Leak and strength tests on open and closed valves are admissible until max. 1.5 times the max. operating pressure. It is not allowed to operate the valves during these tests.
- Do not use inlet air of an area with potentially explosive atmosphere.
- Never use the valve island as lever arm or a step for climbing.

2.2 Installation

Please consider following points before installing the valve island:

- Check if classification of the valve island, the permissible application area and marking on the item of equipment are suitable for the application.
- Check technical data, such as operating pressure, voltage level, current type and temperature, on the product label or in the data sheets for compliance with the existing operating conditions.
- After removing the packaging, make sure that no contamination enters into the system.
- Check before the installation of the system that no contamination exists in the piping and valve island.
- Check during installation of the system that gaskets will not become damaged.

Please consider following points during the installation of the valve island:

- The installation must be taken by qualified personnel with consideration of relevant regulations.
- Any mounting position of the valve island is permissible but valves with indicating lights up is preferred.
- To avoid damaging the product, please make sure that the maximum torque values are not exceeded.
- Prevent connector cables and cords from sharp bends in order to avoid short circuits and interruptions.
- Damaged parts must be replaced with original spare parts from Norgren.
- Order spare parts with the part number indicated on the product labels. (See also other relevant documents).
- For equal potential bonding link all electro-conductive parts including accessories together.
- Ground the complete system.
- Important: Power must be removed from the system while assembling and disassembling electrical connectors, plugs and cables, or valves.

2.3 Operating

- Ensure before commissioning of the valve island, that the whole equipment/machine conform to the provisions of the machine, ATEX and EMC directives as well as other applicable standards and directives.
- The valve island must be used only with air, which does not corrode the system and the contained sealing materials (see also other relevant documents).
- Avoid contact with liquid and corrosive mediums.
- Please refer to section 3.1 for maximum permissible operating conditions for valve islands in an ATEX zone.
- Do not load the system by bending or torsion.

2.4 Failures

- ➡ In case of failure check the connection of pipes, the operating voltage as well as the operating pressure.
- ➡ Check the IO-Link indicators (LEDs) and the PLC for error messages. Please refer to other relevant documents for the definition of IO-Link indicators (LEDs).
- ➡ Any service or repair work as well as replacement of components must be taken in unpressurized condition. Also, power must be removed from the system.
- ➡ Important: It is not allowed to detach or stick a plug or to open a body in a zone with potentially explosive atmosphere when power is not removed.

2.5 Maintenance and repair

Maintenance, inspection and assembly work must be taken by authorised and qualified personnel. Work on pilot valves in general must be taken in unpressurized and cooled off condition. Also, power must be removed from the system. It is recommended to make precautionary maintenance depending on the operating conditions and in case of significant changes in response times. The user is liable for adequate test and maintenance spacing dependent on the operating conditions of the valves. Precipitation, contamination, and aged or worn gaskets can cause failures. Gaskets must be included to ensure the protection class. Damaged parts must be replaced with original spare parts from Norgren. If connectors are removed, make sure no dust contamination can enter into the connectors.

3 ATEX CONFORMITY

3.1 Operating conditions

ATTENTION: Certain permissible operating conditions for ATEX applications can vary from normal applications.

Pilot pressure:	max. 10 bar	
Operating pressure:	max. 16 bar	(if permissible for valve type)
Ambient temperature:	-15°C to 50°C	
Medium temperature:	max. 50°C	
Medium:	Compressed air, filtered, lubricated	(see other relevant documents)
Temperature class:	T4	(see declaration of conformity 3.4)
ATEX category:	II3G / II3D	(see declaration of conformity 3.4)
Voltage range valves (VA+):	24VDC	+/-10%
Voltage range electronics (VS+):	24VDC	+/-30%
Wattage of pilot valves:	1,2W	(per pilot valve)
Use conditions:	100% ED	

Note:



1. The valve islands VS18 and VS26 conform to the Directive 2014/34/EU „equipment of the equipment group II category 3G“, which are potentially explosive through inflammable material in range of temperature class T1 to T4 in zone 2 as well as in the explosions groups IIA, IIB and IIC according to Directive 99/92/EC (ATEX 137) and can be used correspondingly.

Follow the requirements in EN 60079-14 and EN 60079-17 for installing and maintaining the valve islands.

2. The valve islands VS18 and VS26 conform to the Directive 2014/34/EU „equipment of the equipment group II category 3D“, which can be used in zone 22 of inflammable dusts with explosion groups IIIA and IIB according to Directive 99/92/EC (ATEX 137).

Follow the requirements in EN 60079-14 and EN 60079-17 for installing and maintaining the valve islands.

3.2 Labels

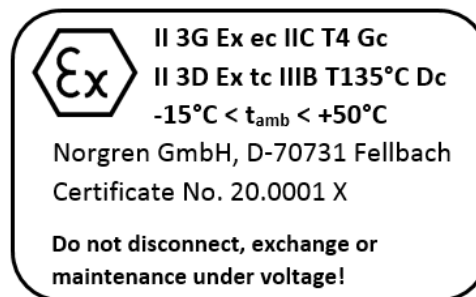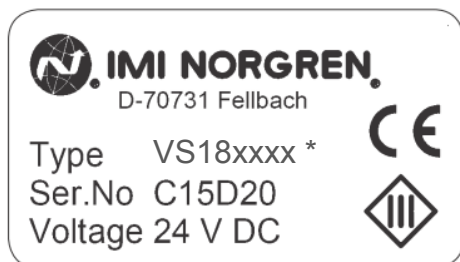

* The Itemnumber of the valve island is an example and is determined by the configurator.

3.3 Specific conditions

The X at the end of the Certificate No. 20.0001 X on the label refers to the following specific conditions:

- The ambient temperature range is between -15°C to +50°C (see operating conditions in section 3.1).
- Important: The device must not be exposed to strong UV light (sunlight).
- The valve island must be used with plugs, which have a conformity evaluation according to Directive 2014/34/EU as well as protection class IP65 or the complete valve island has to be installed in a cabinet that meets the requirements of EN 60079-7 and / or 60079-31.
- The valve island does not meet the impact requirements and therefore must be used in a cabinet or protective box or must be protected against impacts with a protective device (e.g. protective fence). This applies above all for the pilot valves and the plastic parts of the valve island as well as the M12 connectors.
- The valve island shall only be used in an area of at least pollution degree 2, as defined in IEC 60664-1.
Attention: The permissible voltage range of the valve island is:
Voltage range valves (VA+): 24VDC +/-10%
Voltage range electronics (VS+): 24VDC +/-30%
- Attention: There is a risk of electrostatic discharge concerning the labels. Do only clean with a damp cloth.

3.4 Declaration of conformity

For the declaration of conformity please refer to next pages.

-Translation-



**EU – Konformitätserklärung
gemäß der Richtlinie: 2014/34/EU**

Produkt: Valve island of VS18 and VS26 series
IO-Link

Power supply 24V DC 24V

Norgren GmbH
Postfach 15 60
D-70705 Fellbach
Stuttgarter Str. 120
D-70736 Fellbach

Teil: +49 (0) 711 5209-0
Fax: +49 (0) 711 5209-614
www.norgren.com

Model series: VS1872013-BFJ0
VS2672513-CGJ0

Valves: VS18****DF*13E
VS26****DF*13E

Sub-bases: VS1872002-***0; VS1872010-***0;
VS1872261-***0; VS1872262-***0;
VS1872263-***0;
VS2672502-***0; VS2672510-***0;
VS2672761-***0; VS2672762-***0;
VS2672763-***0

**[Breakthrough
Engineering]**

Accessoires: VS1872400-***0 bis VS1872407-***0;
VS1872428-***0; VS1872429-***0;
VS2672900-***0 bis VS2672906-***0;
VS2672928-***0; VS2672929-***0;
V10009-C00; V70522-K00;
V70523-K00; V70531-KA0

Incorporating

 **BUSCHJOST**

 **FAS**

 **HERION**

 **KLOEHN**

 **MAXSEAL**

 **THOMPSON VALVES**

IMI

Geschäftsführer:
Erzo Strappazzon
Christian Kell
Andrew Bruce

Vorsitzender des
Aufsichtsrats:
Thomas Hey

Sitz der Gesellschaft:
Alpen
Handelsregister:
Amtsgericht Kleve, HR B 7257
USt-IdNr.: DE181306280

Bankverbindung:
Bank of America N.A.
IBAN: DE68 5501 0900 0020 6340 26
SWIFT Code BOFADE33




Herewith the manufacturer declares that the named products are in conformity with all relevant provisions of the above mentioned directive to use in potentially explosive atmospheres.

Referenced normative standards

EN 60079-0:2012+A11:2013	General requirements
EN 60079-7:2015	Increased safety "e"
EN 60079-31:2014	Protection by enclosure "t"


Equipment group, Categories, Types of protection

 II 3G Ex ec IIC T4 Gc
II 3D Ex tc IIIB T135°C

Certificate Number: 20.0001 X

Fellbach, September 2020

i.V. 
(Dr. Carsten Hauenschild)
Manager Technical Center Fellbach

i.A. 
(Ulrich Sielemann)
Authorized Representative
German Region

IMI